

WIRING DIAGRAMS

Fig. 1: Engine Compartment, Alternator, Headlights (Grid 1-3)

1993 Audi 90

For DIAKOM-AUTO <http://www.diakom.ru> Taganrog support@diakom.ru (8634)315187

Copyright © 1998 Mitchell Repair Information Company, LLC

Monday, October 30, 2000 03:38PM

COMPONENT LOCATOR:

A/C SYSTEM (AUTO)	A-E 32-35
A/C SYSTEM (MANUAL)	D-E 16-19
A/T SHIFT LEVER RELAY	E 11
ABS COMB RELAY	E 12
ABS CONTROL UNIT	A 13-14
ABS SW	C 19
AIRBAG SYSTEM	A-B 18-19
ALTERNATOR	B 3
AUTOMATIC SHIFT	
LOCK CONTROL UNIT	D 8
AUXILIARY RELAY PANEL LAYOUT	C-D 12-14
BACK-UP LT SW	D 43
BATTERY	A 2
CB #44	D 26
CENTER CONSOLE LT BOOSTER	D-E 14
CENTRAL LOCKING/ALARM	A-C 36-39
CIGAR LTRS & LTS	D 15
COMBINATION SW	A 20-22
COOLING FAN SYSTEM (AUTO)	E 32-33
COOLING FAN SYSTEM (MANUAL)	D 16-19
CRUISE CONTROL SYSTEM	D-E 36-39
DEFROGGER SW	A 42
DOOR LOCK HEATER	E 41
ECONOMY/SPORT BUTTON RELAY	E 8
ELECTRONIC THERMO SW	A 31
ENGINE COMPARTMENT LT	D 2
ENGINE CONTROL UNIT (ECU)	A-E 4
FRONT FOG LT SW	E 30
FRONT LT CONTROL UNIT	C 3
FUEL GAUGE SENDER	D 18
FUEL INJECTORS	D-E 7
FUEL PUMP	B 19
FUSE #27	E 6
FUSE #29	B 17
FUSE #30	A 11
FUSE #31	C 13
FUSE #32	E 5
FUSE #42	D 16
FUSE/RELAY PANEL	C 16-25
FUSE/RELAY PANEL LAYOUT	E 12-13
GEAR SELECT SW	D 11
GLOVE COMPT LT	C 43
HAZARD FLASHER	A-E 28-29
IGNITION COIL ASSY	E 4-5
IGNITION SW	A 16-17
INSTRUMENT CLUSTER	A-E 26-28
INTERIOR LT	D-E 26
LEFT POWER SEAT	D-E 26-27
LIGHT SW	E 22-23
PNP RELAY	B-C 8
POWER MIRRORS	A-B 40
POWER WINDOW CB	D 41
POWER WINDOWS	C-E 40-42
REAR FOG LT SW	E 21
REAR LT CONTROL UNIT	B 43
SEAT BELT WARNING	
CONTROL MODULE	B-C 31
SEAT HEATERS	A-B 26-27
STARTER	A 3
STOP LT SW	A 17
TRANSMISSION CONTROL	
MODULE (TCM)	A 9-10
TRUNK LT	B 38
VARIABLE ASSIST	
POWER STEERING	E 30-31
WIPER MOTOR	E 3

